

Olympus Micro Four Thirds / Four Thirds Cameras

| | E-M1 Mark II (OMD) | E-M1 (OMD) | E-M5 Mark II (OMD) | E-M5 (OMD) | E-M10 Mark III (OMD) | E-M10 Mark II (OMD) | E-M10 (OMD) | PEN-F | E-P5 | E-P3 | E-P2 | E-P1 | E-PL7 | E-PL6 | E-PL5 | E-PL3 | E-PL2 | E-PL1 | E-PM2 | E-PM1 | E-620 | E-520 | E-500 | E-410 | E-30 |
|------------------------------------|--------------------|------------|--------------------|------------|----------------------|---------------------|-------------|-----------------|------|------|------|------|-------|-------|-------|-------|-------|-------|-------|-------|-----------------|-----------------|-----------------|-----------------|-----------------|
| Nissin Model | | | | | | | | | | | | | | | | | | | | | | | | | |
| Air 1 Commander (Four Thirds ver.) | • | • | • | • | ○ | • | • | • ^{*1} | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Di700 A (Four Thirds ver.) | • | • | ○ | • | ○ | • | • | • ^{*1} | • | • | • | • | • | • | • | • | • | • | • | • | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} |
| i60A (Four Thirds ver.) | • | • | • ^{*1} | • | ○ | • | • | • ^{*1} | • | • | • | • | • | • | • | • | • | • | • | • | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} |
| i40 (Four Thirds ver.) | • ^{*1} | • | • ^{*1} | • | ○ | • | • | • ^{*1} | • | • | • | • | • | • | • | • | • | • | • | • | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} | • ^{*2} |
| Di466 (Four Thirds ver.) | - | • | ○ | • | - | ○ | • | ○ | • | • | • | • | ○ | • | • | • | • | • | • | • | • | • | • | • | • |

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Unstable operation may appear when turn on the S-OVF Function (Optical view finder simulation) of EVF and shoot with EVF.
 *2 Flash's optical slave wireless mode is incompatible with camera's wireless flash system.

Panasonic Micro Four Thirds Cameras *3

| | GH5 | GH4 | GH3 | GH2 | GH1 | GX8 | GX7 | GX7 Mark II / GX85 / GX80 | GX1 | G10 | G9 | G8 / G80 / G85 | G7 / G70 | G6 | G5 | G3 | G2 | G1 | GF2 | GF1 | LX100 | LX7 | LX5 | LX3 | FZ200 |
|------------------------------------|-----|-----|-----|-----|-----|-----|-----|---------------------------|-----|-----|----|----------------|----------|----|----|----|----|----|-----|-----|-------|-----|-----|-----|-------|
| Nissin Model | | | | | | | | | | | | | | | | | | | | | | | | | |
| Air 1 Commander (Four Thirds ver.) | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Di700 A (Four Thirds ver.) | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| i60A (Four Thirds ver.) | • | - | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| i40 (Four Thirds ver.) | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Di466 (Four Thirds ver.) | - | • | • | • | • | ○ | • | ○ | • | • | - | - | ○ | • | • | • | • | • | • | • | • | • | • | • | • |

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*3 According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.



Compatibility Chart

Last update: April 2018

Fujifilm Cameras

| | GFX 50s | X-H1 <i>New</i> | X-T2 | X-T1 / X-T1 GS | X-T20 | X-T10 | X-Pro2 | X-Pro1 | X-E2S | X-E2 | X-E1 | X-M1 | X-A2 | X-A1 | X100F | X100T | X100S | X100 | X70 | X30 | X20 | X10 | X-S1 | H550EXR | H530EXR | H520EXR |
|-----------------|---------|-----------------|------|----------------|-------|-------|--------|--------|-------|------|------|------|------|------|-------|-------|-------|------|-----|-----|-----|-----|------|---------|---------|---------|
| Nissin Model | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Air 1 Commander | • *1 | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Di700 A | • *1 | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| i60A | • *1 | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| i40 | • *1 | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |

- Compatible Model
- Incompatible Model

■ The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated

*1 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.