

Compatibility Chart

Canon Cameras

Table listing Canon camera models from EOS 1Dx Mark II to EOS M.

Main compatibility matrix table with columns for camera models and rows for Nissin models (Air 10s Commander, Air 1 Commander, Di700 A, i60A, i40, MF18, MG8000 Extreme, Di866 Mark II, Di700, Di600).

- Legend for symbols: filled circle for Compatible Model, empty circle for incompatible Model, dash for No information available.

- *1 HSS High speed sync. and second-curtain sync not supported.
*2 For using with those Canon camera models, before binding setting, please set Commander Air 1 to "Mode 2".
*3 When using the first 4 product's serial numbers digits smaller than the following value...
*4 Wireless Slave mode does not support the camera built-in flash as the master function.
*5 Since those camera built-in flash have not the master function, they should use an optional master remote unit...
*6 Zoom head operation not supported.
*7 The flash charging lamp in the camera viewfinder will not go out.
*8 Limited by the camera system function, Flash TTL function will be disabled when camera set to M manual exposure mode.
*9 When shooting in continuous mode, flash exposure of TTL mode may become unstable.

Table showing compatibility between Canon Receivers (Air R Receiver Canon) and various Nissin and Canon Flashes (i40 Canon, D466 Canon, etc.).

- Legend for compatibility colors: green for GN Mode. 25-49, red for GN Mode. 50-65.

Nikon Cameras																																																				
	D5	D4s	D4	D3x	D3s	D3	D2xs	D2Hs	D2H	D1	Df	D850	D810	D800E	D800	D750	D700	D610	D600	D500	D300s	D300	D200	D100	D7500	D7200	D7100	D7000	D5600	D5500	D5300	D5200	D5100	D5000	D3400	D3300	D3200	D3100	D3000	D90	D80	D70 / D70s	D60	D50	D40 / D40X	Coolpix A	Coolpix P7700	Coolpix P5100	Coolpix P5000			
Nissin Model																																																				
Air 10s Commander	-	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	-	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○			
Air 1 Commander	● ⁺¹	● ⁺²	● ⁺²	●	●	●	○	○	○	○	○	●	● ⁺³	●	●	●	●	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○
Di700 A	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
i60A	●	●	●	●	●	○	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	
i40	●	●	●	●	●	○	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	
MF18	●	●	●	●	●	○	○	○	○	○	○	●	-	●	●	●	●	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	
MG8000 Extreme	●	●	●	●	●	○	○	○	○	○	○	●	-	●	●	●	●	●	●	●	●	●	○	○	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di866 Mark II	● ⁺³	●	●	●	●	○	○	○	○	○	○	●	-	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di700	○	●	●	●	●	○	-	-	-	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di600	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing.
 *2 In D4 - D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode -1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.
 *3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe
 *4 SD Mode not supported
 *5 Commander / Flash unit may be freeze when camera turn on the electronic shutter mode with mirror up mode. If Commander / Flash unit freezes, remove and re-insert the battery. Turn off the in-compatible function of camera then power on Commander / Flash unit again.

	Nissin Flashes										Nikon Flashes																																						
	i40 Nikon	Di466 Nikon	Di600 Nikon	Di622 Mark II Nikon	Di700 Nikon	Di866 Nikon	Di866 Mark II Nikon	MG8000 Nikon	SB-500	SB-600	SB-700	SB-800	SB-900	SB-910	SB-5000																																		
Air R Receiver Nikon	●	●	●	● ⁺⁵	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
 - Air R's GN Mode. 25-49
 - Air R's GN Mode. 50-65
- *5 FP/HSS high speed sync function not supported

Sony Cameras																																																														
	α9	α7S Mark II	α7S	α7R Mark III	α7R Mark II	α7R	α7 Mark III	α7 Mark II	α7	α6500	α6300	α6000	α3000	NEX-7	NEX-6	α99 Mark II	α99	α77 Mark II	α77	α65	α58	α57	α55V	α33	α900	α850	α700	α580	α560	α550	α500	α450	α390	α380	α350	α330	α300	α290	α230	α200	α100	RX1R Mark II	RX1	RX10	RX10 Mark II	RX10 Mark III	RX10 Mark IV	RX100 Mark II	HX400V	HX60V												
Air 10s Commander	-	-	●	●	●	-	●	●	●	-	●	●	○	-	-	●	●	●	●	●	●	●	○	○	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○								
Air 1 Commander	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○					
D1700 A	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●					
160A	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
140	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

● Compatible Model
 ○ incompatible Model
 - No information available. To be confirmed.
 *1 Use the Sony Shoe Adaptor (ADP-AMA)
 *2 It slightly interferes (contacts) with the EVF. Since you can not use EVF, it can not be used because diopter correction does not work by interfering.
 *4 For using with those Sony camera models, not support the Air R's HSS High-speed sync function :: α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark II , α99 Mark II , α6500

	Nissin Flashes		Sony Flashes					
	140 Sony	D1622 Mak II Sony	D1866 Mak II Sony	HVL-F32M	HVL-F12AM	HVL-F43M	HVL-F58AM	HVL-F60M
Air R Receiver Sony *4	●	●	●	●	●	●	●	●

● Compatible Model
 ● GN Mode. 25-49
 ● GN Mode. 50-65
 *1 Use the Sony Shoe Adaptor (ADP-AMA)
 *3 Use the Sony Shoe Adaptor (ADP-AMA). Due to the design of the ADP-AMA adapter, bad contact may always occur when using ADP-AMA. Depends on the situation of use, the operation may be unstable.
 *4 For using with those Sony camera models, the HSS High-speed sync function of the flash inserted on Air R can not be used, α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark II , α99 Mark II , α6500

Nissin DIGITAL Compatibility Chart Last update: Oct 2018

Olympus Micro Four Thirds / Four Thirds Cameras

	E-M1 Mark II (OMD)	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark II (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P9	E-P2	E-P1	E-PL8 New	E-PL7	E-PL6	E-PL5	E-PL3	E-PL2	E-PL1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30
--	--------------------	------------	--------------------	------------	---------------------	---------------------	-------------	-------	------	------	------	------	------------------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	------

Nissin Model																											
Air 10s Commander (Four Thirds ver.) New	●	●	●	●	●	—	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—	
Air 3 Commander (Four Thirds ver.)	●	●	●	●	○	●	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—	
D1700 A (Four Thirds ver.)	●	●	●	○	○	●	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—	
i60A (Four Thirds ver.)	●	●	●	●	●	●	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—	
i40 (Four Thirds ver.)	●	●	●	●	○	●	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—	
D1466 (Four Thirds ver.)	—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

- Compatible Model
 - Incompatible Model
 - No information available. To be confirmed.
- *1 Unstable operation may appear when turn on the S-OVF Function (Optical view finder simulation) of EVF and shoot with EVF.
 *2 Flash's optical slave wireless mode is incompatible with camera's wireless flash system.
 *3 D1700A for FT version will be supporting Olympus E-M5 Mark II after flash firmware updated.

Nissin DIGITAL Compatibility Chart Last update: Oct 2018

Panasonic Micro Four Thirds Cameras *4

	GH5	GH4	GH3	GH2	GH1	GX8	GX7	GX7 Mark II / GX85 / GX80	GX1	G10	G9	G8 / G80 / G85	G7 / G70	G6	G5	G3	G2	G1	GF2	GF1	LX100	LX7	LX5	LX3	FZ200
--	-----	-----	-----	-----	-----	-----	-----	---------------------------	-----	-----	----	----------------	----------	----	----	----	----	----	-----	-----	-------	-----	-----	-----	-------

Nissin Model																									
Air 10s Commander (Four Thirds ver.) New	—	—	●	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Air 3 Commander (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
D1700 A (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A (Four Thirds ver.)	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
D1466 (Four Thirds ver.)	—	●	●	●	○	●	○	●	●	●	—	○	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
 - Incompatible Model
 - No information available. To be confirmed.
- *4 According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.

Fujifilm Cameras																														
	GFX 50s	X-H1	X-T2	X-T1 / X-T1 GS	X-T20	X-T10	X-Pro2	X-Pro1	X-E3	X-E2S	X-E2	X-E1	X-M1	X-A5	X-A3	X-A2	X-A1	X100F	X100T	X100S	X100	X70	X30	X20	X10	X-S1	HSS/DEXR	HSS/DEXR	HSS/DEXR	
Nissin Model																														
Air 10s Commander	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	—
Air 1 Commander	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Di700 A	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i60A	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i40	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○

- Compatible Model
- Incompatible Model
- This camera supports HSS/FP High speed synchronize function.

*1 The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated
 *2 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.